



CLAY TARGET MACHINES

## RADIO BRACKET - ASSEMBLY INSTRUCTIONS

MEC P/N – 12000255

**CAUTION: ANY MEC CLAY TARGET MACHINE MUST BE IN THE DISARMED STATE WITH THE BATTERY DISCONNECTED PRIOR TO MAKING ANY ADJUSTMENTS, LOADING THE CLAY TARGETS OR TRANSPORTATION OF MACHINE.**

NO.	Description	QTY.	P/N
1	RADIO BRACKET	1	120100198
2	#10-32 HEX BOLT	1	HDW2001
3	½"-13 X 1.25" HEX BOLT	1	HDW6211
4	#10-32 HEX NUT	1	HDW7543

**Step 1** – Attach the radio bracket to the T-Cart using the ½" bolt provided.

**Step 2** – Place the Long Range receiver into the bracket and attach using the #10 hardware. Tighten Securely. Note, it may be easier to access the hardware if the antenna is unscrewed.

**Step 3** – Lastly, reattach the antenna if you removed it.


For any questions regarding setup or use of any MEC Clay Target Machines, please give us a call or you can visit us on our website for video footage showing how setup and adjustments are made.

For a complete listing of spare parts for MEC and other brands of machines, and for pricing, be sure to check out our website.

HDW2001

120100198

HDW6211

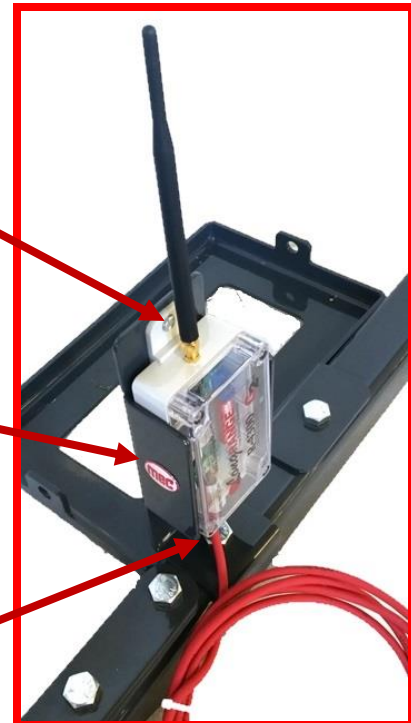

MEC Clay Target Machines  
800 Horicon Street, Suite 1  
Mayville, WI 53050 USA  
920-387-4500  
1-800-676-0365  
[www.mecshootingsports.com](http://www.mecshootingsports.com)