



Bars bored for powder bushings are designated 502 series for progressive tools and 302 series for single stage tools. The number below either series indicates the amount of shot the bar will dispense. Example: A 302-118 is single stage charge bar and will drop 1-1/8 oz. of shot. POWDER HOLES ONLY are bored to accept bushings. It is mandatory that your order for bars includes both the series number and weight of the shot charge. Powder bushings are selected by number from the bushing chart (see inside spread).


CAUTION: Lead Shot Bars and Steel Shot Bars are NOT interchangeable.

**POWDER BUSHINGS ARE AVAILABLE FOR THE FOLLOWING CHARGE BARS**

PROGRESSIVE STEEL SHOT BARS AVAILABLE		
50207814	7/8 oz.	#1 thru #4 Shot
50207856	7/8 oz.	#5 thru #6 Shot
502100BB2	1 oz.	BB thru #2 Shot
50210036	1 oz.	#3 thru #6 Shot
502118BB3	1 1/8 oz.	BB thru #3 Shot
50211846	1 1/8 oz.	#4 thru #6 Shot
502114BB2	1 1/4 oz.	BB thru #2 Shot
50211436	1 1/4 oz.	#3 thru #6 Shot

Contact the factory for information regarding steel shot conversion for the hydraulic presses. Both 302 and 502 charge bars have a soft insert to prevent the shearing of shot. With this insert it is no longer necessary to use a grommet under the shot bottle. If the insert ever requires replacing, it is Part #8440.

SINGLE STAGE STEEL SHOT BARS AVAILABLE		
30207814	7/8 oz.	#1 thru #4 Shot
30207856	7/8 oz.	#5 thru #6 Shot
302100BB2	1 oz.	BB thru #2 Shot
30210036	1 oz.	#3 thru #6 Shot
302118BB3	1 1/8 oz.	BB thru #3 Shot
30211846	1 1/8 oz.	#4 thru #6 Shot
302114BB2	1 1/4 oz.	BB thru #2 Shot
30211436	1 1/4 oz.	#3 thru #6 Shot
302138BB2	1 3/8 oz.	BB thru #2 Shot
30213836	1 3/8 oz.	#3 thru #6 Shot
302112BB2	1 1/2 oz.	BB thru #2 Shot
30211236	1 1/2 oz.	#3 thru #6 Shot

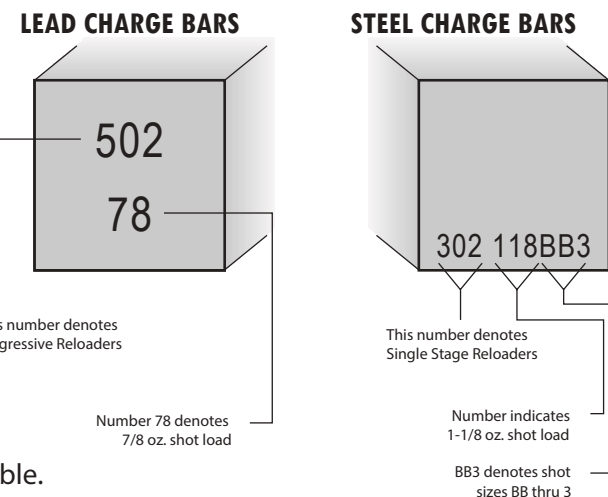

MISCELLANEOUS LEAD SHOT BARS AVAILABLE			
Bar Number	Oz. Shot	Bar Number	Oz. Shot
214	2 1/4	114	1 1/4
200	2	1316	1 3/16
178	1 7/8	118	1 1/8
134	1 3/4	100	1
158	1 5/8	78	7/8
112	1 1/2	34	3/4
138	1 3/8	1116	1 1/16
		58	5/8
		12	1/2

SKEET SPECIAL				
Single Stage Bar No.	Oz.	Progressive Bar No.	Oz.	Shell Size
302118SS	1 1/8	502118SS	1 1/8	12GA
30278SS	7/8	50278SS	7/8	20GA
30234SS	3/4	50234SS	3/4	28GA
30212SS	1/2	50212SS	1/2	410GA

**Note To Skeet Shooters**  
When using soft #9 shot with our standard bar, it is possible that your charge weight will exceed that which is allowed by the NSSA. By using our "SKEET SPECIAL" charge bar, you will stay within the limits set by the NSSA.

MEC charge bars with soft inserts help minimize shearing of shot.



CHILLED SHOT CONVERSION TABLE															
Weight Ounces	1/2	5/8	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2	1 5/8	1 3/4	1 7/8	2	2 1/8	
Weight Grains	219	273	328	383	438	492	547	602	656	711	766	820	875	930	
Loads per Lb.	32	26	21	18	16	14	13	12	11	10	9	9	8	8	
Size	Approximate No. of Pellets per load (lead shot only)														
BB	.18	25	21	38	44	50	56	63	69	75	81	88	94	100	106
2	.15	44	55	66	77	88	99	110	121	132	143	154	165	176	187
4	.13	68	85	102	119	136	153	170	187	204	221	238	255	272	289
5	.12	86	108	129	151	172	194	215	237	258	280	301	323	344	366
6	.11	112	139	167	195	223	251	279	307	335	362	390	418	446	474
7	.10	150	187	224	262	299	336	374	411	449	486	523	561	598	635
7 1/2	.095	173	216	259	302	345	388	431	474	518	561	604	647	690	733
8	.09	205	256	301	358	409	460	511	562	614	665	716	767	818	869
8 1/2	.085	240	300	360	420	480	540	600	660	720	780	840	900	960	1020
9	.08	293	366	439	512	585	658	731	804	878	951	1024	1097	1170	1243



An Employee Owned Company  
800 Horicon Street Suite 1 • Mayville, WI 53050 • 1.800.797.4632  
Website: www.mecoutdoors.com • E-mail: reloadersales@mecoutdoors.com



# POWDER BUSHING CHART

and Charge Bar Selection Information



This brochure is meant to supply you with the information needed to select the right bar and bushing insert to safely load the shotshell of your choice.

The MEC charge bar determines the amount of shot that will be dropped and the MEC bushing determines the amount of powder. The ratio for powder is determined by the recipe you select and the brand name powder you wish to use.

**WARNING!**

The use of an accurate scale is strongly recommended with the use of this powder bushing chart. Many things can cause a variation from the weight listed on the chart. They include but are not limited to:

- Powder density. The manufacturers tolerance can cause a slight variation from the weight shown on the chart, and may even vary from lot to lot.
- Individual operators give varying amounts of vibration to the machine causing the powder to pack. All loads should be checked during the actual reloading cycle. Do not just throw a powder charge and expect it to be the same as during the reloading cycle. Even the amount of powder in the reloader's bottle may cause a slight variance.
- Powder exposed to the atmosphere can pick up moisture and weight heavy.
- The larger the flake size, the lighter the charge tends to be.
- A machine that is not solidly mounted will usually not throw charges as uniform as one that is.
- Single stage machines will usually throw heavier charges than progressive reloading machines.

